

Cover Replace & Unloading System CRS-1000

System Performance

System Layout

System Functions



SYSTEM PERFORMANCE





SYSTEM LAYOUT







LOADING & UNLOADING ZONE



Magazine elevator



Loading pusher



Boat gripper

- Magazine loading by conveyor belt (4 MGZ Stack)
- Auto conversion by step motor for MGZ length adjustment
- Strip loading by step motor(loading pusher)
- Overload detect sensor for prevent Boat damage
- Magazine empty / full detect sensor
- Boat loading / unloading by boat gripper



STRIP LOADING ZONE





Cover loading unit



Strip picker

Cover Stack Elevator by AC motor

Strip loading on boat by vacuum strip picker



COVER LOADING & BOAT UNLOADING ZONE

Cover picker







Cover loading unit

Unloading pusher



Magazine elevator

- Cover elevating by AC motor
- Strip loading by step motor(loading pusher)
- Overload detect sensor for prevent boat damage
- Magazine elevating by servo motor
- Magazine loading by conveyor belt (4 MGZ Stack)
- Auto conversion by step motor for MGZ length adjustment
- Magazine empty / full detect sensor



Technical realization

to create an imagined reality